

L4 ANSWER 4 OF 5 WPIDS COPYRIGHT 2001 DERWENT INFORMATION LTD FAMILY

1

AN 2000-328915 [28] WPIDS

CR 2000-304531 [24]; 2000-432360 [36]; 2000-465288 [37]; 2000-524288 [43]

DNC C2000-099647

TI Catalyst system used in (co)polymerization of olefins contains
metallocene, Lewis base and organoboron or organoaluminum compound bound
covalently to support.

DC A18 E11 E12

IN BREKNER, M; FRAAIJE, V; KRATZER, R; OBERHOFF, M; SCHOTTEK, J; WINTER, A;
BECKER, P; BOHNEN, H; FRITZE, C

PA (TARG) TARGOR GMBH

CYC 21

PI WO 2000020466 A1 20000413 (200028)* DE 56p

RW: AT BE CH CY DE DK ES FI FR GB GR IE IT LU MC NL PT SE

W: JP KR US

DE 19903306 A1 20000803 (200039)

ADT WO 2000020466 A1 WO 1999-EP7087 19990923; DE 19903306 A1 DE 1999-19903306
19990128

PRAI DE 1999-19903306 19990128; DE 1998-19845240 19981001

AN 2000-328915 [28] WPIDS

CR 2000-304531 [24]; 2000-432360 [36]; 2000-465288 [37]; 2000-524288 [43]

AB WO 200020466 A UPAB: 20000925

NOVELTY - Catalyst system contains (A) metallocene(s) (I), (B) Lewis
base(s) (II), consisting of hydride of a main group V element or organic
derivative, (C) support(s) (III) and (D) organoboron or organoaluminum
compound(s), consisting of units of formula (IV) bound covalently to
(III), which have 2 di-substituted atoms of a group IIIA element attached
to a group VIA element or imino (NH).

DETAILED DESCRIPTION - Catalyst system contains (A) metallocene(s)
(I), (B) Lewis base(s) of formula M1R3R4R5 (II), consisting of hydride of
a main group V element or organic derivative, (C) support(s) (III) and
(D) organoboron or organoaluminum compound(s), consisting of units of
formula (R12M2-X-M2-R22)k (IV) bound covalently to (III), which have 2
di-substituted atoms of a group IIIA element attached to a group VIA
element or imino (NH);

R3, R4, R5 = H, 1-20 C (halo)alkyl, 6-40 C (halo)aryl, 7-40 C
alkylaryl or 7-40 C arylalkyl; or

2 or all 3 of R3, R4, R5 = 2-20C units;

M1 = a main group V element, especially nitrogen or phosphorus;

R1, R2 = H, halogen, boron-free 1-40 C organyl, e.g. 1-20 C
(halo)alkyl, 1-10 C alkoxy, 6-20 C (halo)aryl, 6-20 C aryloxy, 7-40 C
(halo)arylalkyl or 7-40 C (halo)alkylaryl; or

R1 = OSiRa3 or CH(SiRb3)2;

Ra, Rb = H, halogen or 1-40 C organyl, e.g. 1-20 C (halo)alkyl, 1-10
C alkoxy, 6-20 C (halo)aryl, 6-20 C aryloxy, 7-40 C (halo)arylalkyl, 7-40
C (halo)alkylaryl;

X = a group VIA element or NH;

M2 = a group IIIA element;

k = 1-100.

USE - The catalyst system is used in the production of a polyolefin
and in a process for polymerizing one or more olefins (all claimed). It is
useful in the polymerization of olefins, vinyl and vinylidene halides and
olefinic ethers, alcohols, aldehydes, carboxylic acids and esters and
cyclic compounds, such as 1-olefins (e.g. ethylene, propylene, but-1-ene,
hex-1-ene, 4-methyl-pent-1-ene, oct-1-ene, styrene), cyclic olefins
(norbornene, vinyl norbornene, tetracyclododecene, ethylidene norbornene),
dienes (buta-1,3-diene or hexa-1,4-diene), biscyclopentadiene and methyl
methacrylate. The system is especially useful in the homopolymerization of
propylene or ethylene or copolymerization of ethylene with 3-20 C
1-olefins, especially propylene, and/or 4-20 C dienes, especially
buta-1,3-diene, or of norbornene and ethylene.

ADVANTAGE - The system has high catalytic activity and gives good
polymer morphology, whilst avoiding the use of aluminoxanes, e.g.
methylaluminoxane. Unlike existing catalyst systems, it can be
pre-activated or activated in the polymerization autoclave.

Dwg.0/0

PA



PCT
WELTORGANISATION FÜR GEISTIGES EIGENTUM
Internationales Büro
INTERNATIONALE ANMELDUNG VERÖFFENTLICHT NACH DEM VERTRAG ÜBER DIE
INTERNATIONALE ZUSAMMENARBEIT AUF DEM GEBIET DES PATENTWESENS (PCT)

(51) Internationale Patentklassifikation ⁷ : C08F 4/60, 10/00		A1	(11) Internationale Veröffentlichungsnummer: WO 00/20466
			(43) Internationales Veröffentlichungsdatum: 13. April 2000 (13.04.00)
(21) Internationales Aktenzeichen: PCT/EP99/07087		(81) Bestimmungsstaaten: JP, KR, US, europäisches Patent (AT, BE, CH, CY, DE, DK, ES, FI, FR, GB, GR, IE, IT, LU, MC, NL, PT, SE).	
(22) Internationales Anmeldedatum: 23. September 1999 (23.09.99)		Veröffentlicht <i>Mit internationalem Recherchenbericht.</i> <i>Vor Ablauf der für Änderungen der Ansprüche zugelassenen Frist; Veröffentlichung wird wiederholt falls Änderungen eintreffen.</i>	
(30) Prioritätsdaten: 198 45 240.3 1. Oktober 1998 (01.10.98) DE 199 03 306.4 28. Januar 1999 (28.01.99) DE			
(71) Anmelder (für alle Bestimmungsstaaten ausser US): TARGOR GMBH [DE/DE]; D-55116 Mainz (DE).			
(72) Erfinder; und (75) Erfinder/Anmelder (nur für US): SCHOTTEK, Jörg [DE/DE]; Mühlgasse 3, D-60486 Frankfurt am Main (DE). FRITZE, Cornelia [DE/DE]; Geisenheimer Strasse 97, D-60529 Frankfurt am Main (DE). BOHNEN, Hans [DE/DE]; Grenzstrasse 146, D-47441 Moers (DE). BECKER, Patricia [DE/DE]; Alpenring 39, D-64546 Mörfelden-Walldorf (DE).			
(74) Anwalt: HINKELMANN, Klaus; BASF Aktiengesellschaft, D-67056 Ludwigshafen (DE).			

(54) Title: **CATALYST SYSTEM**

(54) Bezeichnung: **KATALYSATORSYSTEM**

(57) Abstract

The invention relates to a catalyst system comprised of a metallocene, a co-catalyst, a supporting material and optionally of another organometallic compound. The catalyst system can be advantageously used for the polymerization of olefins. In doing this, the use of aluminoxanes such as methylaluminoxane (MAO) as a co-catalyst is foregone and yet a high catalytic activity and a good polymeric morphology are achieved.

(57) Zusammenfassung

Die vorliegende Erfindung beschreibt ein Katalysatorsystem bestehend aus einem Metallocen, einem Co-Katalysator, einem Trägermaterial und gegebenenfalls einer weiteren Organometallverbindung. Das Katalysatorsystem kann vorteilhaft zur Polymerisation von Olefinen eingesetzt werden. Hierbei wird auf die Verwendung von Aluminoxanen wie Methylaluminoxan (MAO) als Cokatalysator verzichtet und dennoch eine hohe Katalysatoraktivität und gute Polymermorphologie erzielt.

LEDIGLICH ZUR INFORMATION

Codes zur Identifizierung von PCT-Vertragsstaaten auf den Kopfbögen der Schriften, die internationale Anmeldungen gemäss dem PCT veröffentlichen.

AL	Albanien	ES	Spanien	LS	Lesotho	SI	Slowenien
AM	Armenien	FI	Finnland	LT	Litauen	SK	Slowakei
AT	Österreich	FR	Frankreich	LU	Luxemburg	SN	Senegal
AU	Australien	GA	Gabun	LV	Lettland	SZ	Swasiland
AZ	Aserbaidschan	GB	Vereinigtes Königreich	MC	Monaco	TD	Tschad
BA	Bosnien-Herzegowina	GE	Georgien	MD	Republik Moldau	TG	Togo
BB	Barbados	GH	Ghana	MG	Madagaskar	TJ	Tadschikistan
BE	Belgien	GN	Guinea	MK	Die ehemalige jugoslawische Republik Mazedonien	TM	Turkmenistan
BF	Burkina Faso	GR	Griechenland	ML	Mali	TR	Türkei
BG	Bulgarien	HU	Ungarn	MN	Mongolei	TT	Trinidad und Tobago
BJ	Benin	IE	Irland	MR	Mauritanien	UA	Ukraine
BR	Brasilien	IL	Israel	MW	Malawi	UG	Uganda
BY	Belarus	IS	Island	MX	Mexiko	US	Vereinigte Staaten von Amerika
CA	Kanada	IT	Italien	NE	Niger	UZ	Usbekistan
CF	Zentralafrikanische Republik	JP	Japan	NL	Niederlande	VN	Vietnam
CG	Kongo	KE	Kenia	NO	Norwegen	YU	Jugoslawien
CH	Schweiz	KG	Kirgisistan	NZ	Neuseeland	ZW	Zimbabwe
CI	Côte d'Ivoire	KP	Demokratische Volksrepublik Korea	PL	Polen		
CM	Kamerun	KR	Republik Korea	PT	Portugal		
CN	China	KZ	Kasachstan	RO	Rumänien		
CU	Kuba	LC	St. Lucia	RU	Russische Föderation		
CZ	Tschechische Republik	LI	Liechtenstein	SD	Sudan		
DE	Deutschland	LK	Sri Lanka	SE	Schweden		
DK	Dänemark	LR	Liberia	SG	Singapur		
EE	Estland						

Beschreibung

Katalysatorsystem

5 Die vorliegende Erfindung beschreibt ein Katalysatorsystem bestehen aus einem Metallocen, einem Co-Katalysator, einem Trägermaterial und gegebenenfalls einer weiteren Organometallverbindung. Das Katalysatorsystem kann vorteilhaft zur Polymerisation von Olefinen eingesetzt werden. Hierbei wird auf die Verwendung von Aluminoxanen wie Methylaluminoxan (MAO) als Cokatalysator verzichtet und
10 dennoch eine hohe Katalysatoraktivität und gute Polymormorphologie erzielt.

Die Rolle von kationischen Komplexen bei der Ziegler-Natta-Polymerisation mit Metallocenen ist allgemein anerkannt (H.H. Brintzinger, D. Fischer, R. Mülhaupt, R. Rieger, R. Waymouth, Angew. Chem. 1995, 107, 1255-1283).

15 MAO als wirksamer Co-Katalysator hat den Nachteil in hohem Überschuß eingesetzt werden zu müssen. Die Darstellung kationischer Alkylkomplexe eröffnet den Weg MAO freier Katalysatoren mit vergleichbarer Aktivität, wobei der Co-Katalysator nahezu stöchiometrisch eingesetzt werden kann.

Die Synthese von "Kationen-ähnlichen" Metallocen-Polymerisationskatalysatoren, wird im J. Am. Chem. Soc. 1991, 113, 3623 beschrieben. Ein Verfahren zur Herstellung von Salzen der allgemeinen Form $LMX^+ XA^-$ nach dem oben beschriebenen Prinzip wird in EP-A-0 520 732 beansprucht.

EP-A-0 558 158 beschreibt zwitterionische Katalysatorsysteme, die aus Metallocendialkyl-Verbindungen und Salzen der Form $[R_3NH]^+ [B(C_6H_5)_4]^-$ dargestellt werden. Die Umsetzung eines solchen Salzes mit z.B. Cp_2ZrMe_2 liefert durch Protolyse unter Methanabspaltung intermediär ein Zirkonocenmethyl-Kation. Dieses reagiert über C-H-Aktivierung zum Zwitterion $Cp_2Zr^+-(m-C_6H_4)-BPh_3^-$ ab. Das Zr-Atom ist dabei kovalent an ein Kohlenstoffatom des Phenylrings gebunden und wird über agostische Wasserstoffbindungen stabilisiert.

30 US-A-5, 348, 299 beschreibt zwitterionische Katalysatorsysteme, die aus Metallocendialkyl-Verbindungen und Salzen der Form $[R_3NH]^+ [B(C_6F_5)_4]^-$ durch

Protolyse dargestellt werden. Die C-H-Aktivierung als Folgereaktion unterbleibt dabei.

EP-A-0 426 637 nutzt ein Verfahren in dem das Lewis-saure CPh_3^+ Kation zur Abstraktion der Methylgruppe vom Metallzentrum eingesetzt wird. Als schwach koordinierendes Anion fungiert ebenfalls $\text{B}(\text{C}_6\text{F}_5)_4^-$.

Eine industrielle Nutzung von Metallocen-Katalysatoren fordert eine Heterogenisierung des Katalysatorsystems, um eine entsprechende Morphologie des resultierenden Polymers zu gewährleisten. Die Trägerung von kationischen Metallocen-Katalysatoren auf Basis der oben genannten Borat-Anionen ist in WO 91/09882 beschrieben. Dabei wird das Katalysatorsystem, durch Aufbringen einer Dialkylmetallocen-Verbindung und einer Brönsted sauren, quaternären Ammonium-Verbindung, mit einem nichtkoordinierenden Anion wie Tetrakis(pentafluorphenyl)borat, auf einem anorganischen Träger, gebildet. Das Trägermaterial wird zuvor mit einer Trialkylaluminium-Verbindung modifiziert.

Nachteil dieses Trägerungsverfahrens ist, daß nur ein geringer Teil des eingesetzten Metallocens durch Physisorption an dem Trägermaterial fixiert ist. Bei der Dosierung des Katalysatorsystems in den Reaktor kann das Metallocen leicht von der Trägeroberfläche abgelöst werden. Dies führt zu einer teilweisen homogen verlaufenden Polymerisation, was eine unbefriedigende Morphologie des Polymers zur Folge hat. Im WO96/04319 wird ein Katalysatorsystem beschrieben, in welchem der Cokatalysator kovalent an das Trägermaterial gebunden ist. Dieses Katalysatorsystem weist jedoch eine geringe Polymerisationsaktivität auf, zudem kann die hohe Empfindlichkeit der geträgerten kationischen Metallocen-Katalysatoren zu Problemen bei der Einschleusung in das Polymerisationssystem führen.

Es war daher wünschenswert ein Katalysatorsystem zu entwickeln, das wahlweise vor dem Einschleusen in den Reaktor bereits aktiviert ist oder erst im Polymerisationsautoklav aktiviert wird.

Die Aufgabe bestand darin ein Katalysatorsystem zur Verfügung zu stellen, welches die Nachteile des Standes der Technik vermeidet und trotzdem hohe Polymersationsaktivitäten und eine gute Polymermorphologie garantiert. Zudem war ein Verfahren zur Herstellung dieses Katalysatorsystems zu entwickeln, das es ermöglicht die Aktivierung des Katalysatorsystems wahlweise vor dem Einschleusen oder aber erst im Polymerisationsautoklav durchzuführen.

Die vorliegende Erfindung betrifft ein geträgertes Katalysatorsystem und ein Verfahren zur Herstellung von diesem. Weiterer Gegenstand der vorliegenden Erfindung ist die Verwendung des erfindungsgemäßen Katalysatorsystems in der Herstellung von Polyolefinen.

Das erfindungsgemäße Katalysatorsystem enthält

- A) mindestens ein Metallocen,
B) mindestens eine Lewis Base der Formel I




worin

R^3, R^4, R^5 gleich oder verschieden sind und ein Wasserstoffatom, eine C_1 - C_{20} Alkyl-, C_1 - C_{20} Halogenalkyl-, C_6 - C_{40} Aryl-, C_6 - C_{40} Halogenaryl-, C_7 - C_{40} Alkylaryl- oder C_7 - C_{40} Arylalkyl-Gruppe ist und zwei Reste oder alle drei Reste R^3, R^4 und R^5 über C_2 - C_{20} Kohlenstoffeinheiten miteinander verbunden sein können,

M^1 ist ein Element der V. Hauptgruppe des Periodensystems der Elemente, insbesondere Stickstoff oder Phosphor

- C) mindestens einen Träger
D) und mindestens eine Organobor- oder Organoaluminium-Verbindung, die aus Einheiten der Formel II



worin

R^1, R^2 gleich oder verschieden sind und ein Wasserstoffatom, ein Halogenatom, eine borfreie C_1 - C_{40} -kohlenstoffhaltige Gruppe wie C_1 - C_{20} -Alkyl, C_1 - C_{20} -Halogenalkyl, C_1 - C_{10} -Alkoxy, C_6 - C_{20} -Aryl, C_6 - C_{20} -

Halogenaryl, C₆-C₂₀-Aryloxy, C₇-C₄₀-Arylalkyl, C₇-C₄₀-Halogenarylalkyl, C₇-C₄₀-Alkylaryl, C₇-C₄₀-Halogenalkylaryl sind oder R¹ kann eine OSiR^a₃-Gruppe sein, worin R^a gleich oder verschieden sind und ein Wasserstoffatom, ein Halogenatom, eine C₁-C₄₀-kohlenstoffhaltige Gruppe wie C₁-C₂₀-Alkyl, C₁-C₂₀-Halogenalkyl, C₁-C₁₀-Alkoxy, C₆-C₂₀-Aryl, C₆-C₂₀-Halogenaryl, C₆-C₂₀-Aryloxy, C₇-C₄₀-Arylalkyl, C₇-C₄₀-Halogenarylalkyl, C₇-C₄₀-Alkylaryl, C₇-C₄₀-Halogenalkylaryl sind oder R¹ kann eine CH(SiR^b₃)₂-Gruppe sein, worin R^b gleich oder verschieden sind und ein Wasserstoffatom, ein Halogenatom, eine C₁-C₄₀-kohlenstoffhaltige Gruppe wie C₁-C₂₀-Alkyl, C₁-C₂₀-Halogenalkyl, C₁-C₁₀-Alkoxy, C₆-C₂₀-Aryl, C₆-C₂₀-Halogenaryl, C₆-C₂₀-Aryloxy, C₇-C₄₀-Arylalkyl, C₇-C₄₀-Halogenarylalkyl, C₇-C₄₀-Alkylaryl, C₇-C₄₀-Halogenalkylaryl sein,

X gleich oder verschieden ein Element der Gruppe VIa des Periodensystems der Elemente oder eine NH-Gruppe ist,

M² ein Element der IIIa des Periodensystems der Elemente ist, und

k eine natürliche Zahl von 1 bis 100 ist.

aufgebaut ist und die kovalent an den Träger gebunden ist.


Bevorzugte Verbindungen der Formel (I) sind Triethylamin, Triisopropylamin, Triisobutylamin, Tri(n-butyl)amin, N,N-Dimethylanilin, N,N-Diethylanilin, N,N-2,4,6-Pentamethylanilin, Dicyclohexylamin, Pyridin, Pyrazin, Triphenylphosphin, Tri(methylphenyl)phosphin, Tri(dimethylphenyl)phosphin

Die Verbindungen der Formel (II) können als Monomer oder als lineares, cyclisches oder käfigartiges Oligomer vorliegen. Außerdem können die erfindungsgemäßen Verbindungen der Formel (II) durch Lewis Säure-Base Wechselwirkung untereinander Dimere, Trimere oder höhere Oligomere bilden.

Bevorzugte kokatalytisch wirkende chemische Verbindung der Formel (II), sind Verbindungen in denen X ein Sauerstoff Atom oder eine NH-Gruppe ist und die Reste R¹, R² ein borfreier C₁-C₄₀-Kohlenwasserstoffrest, der mit Halogenen wie







Flour, Chlor, Brom oder Jod halogeniert, bevorzugt perhalogeniert, ist. Insbesondere bevorzugt ist R^1 , R^2 eine halogenierte, insbesondere perhalogenierte C_1 - C_{30} -Alkylgruppe wie Trifluormethyl-, Pentachlorethyl-, Heptafluorisopropyl oder Monofluorisobutyl oder eine halogenierte C_6 - C_{30} -Arylgruppe wie Pentafluorphenyl-, 2,4,6-Trifluorphenyl, Heptachlornaphtyl-, Heptafluornaphthyl, Heptafluortolyl-, 3,5-bis(trifluormethyl)phenyl-, 2,4,6-tris(trifluormethyl)phenyl, Nonafluorbiphenyl- oder 4-(trifluormethyl)phenyl. Ebenfalls bevorzugt für R^1 sind Reste wie Phenyl-, Naphtyl-, Anisyl-, Methyl-, Ethyl-, Isopropyl-, Butyl-, Tolyl-, Biphenyl oder 2,3-Dimethyl-phenyl. Besonders bevorzugt sind die Reste Pentafluorphenyl-, Phenyl-, Biphenyl, 3,5-bis(trifluormethyl)phenyl-, 4-trifluormethyl)phenyl, Nonafluorbiphenyl- und 4-Methyl-phenyl.



Ganz besonders bevorzugte kokatalytisch wirkende chemische Verbindungen der Formel (II) sind solchen, in denen X für Sauerstoff, M^2 für Bor steht. Diese werden durch die Formel (III)

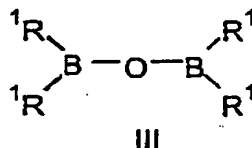

worin R^1 für die unter Formel (II) angegebenen Reste steht, beschrieben.

Bevorzugte Ausführungsformen der Formel (II) sind die nachfolgenden:

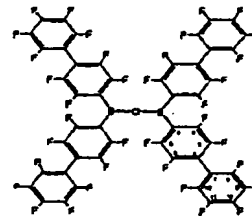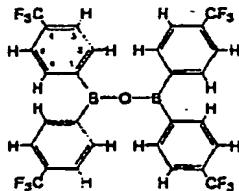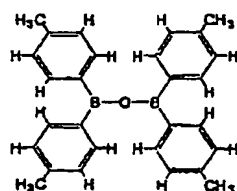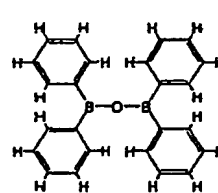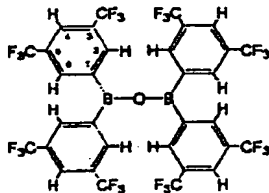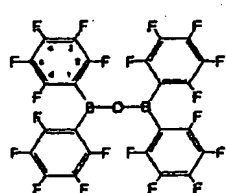

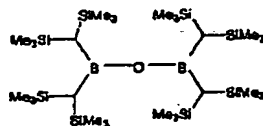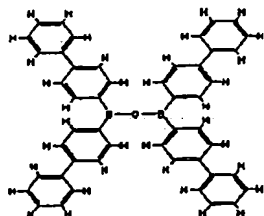

Die Trägerkomponente des erfindungsgemäßen Katalysatorsystems kann ein beliebiger organischer oder anorganischer, inerte Feststoff sein, insbesondere ein poröser Träger wie Talk, anorganische Oxide und feinteilige Polymerpulver (z.B. Polyolefine).

Geeignete anorganische Oxide finden sich in den Gruppen 2, 3, 4, 5, 13, 14, 15 und 16 des Periodensystems der Elemente. Beispiele für als Träger bevorzugte Oxide umfassen Siliciumdioxid, Aluminiumoxid, sowie Mischoxide der beiden Elemente und entsprechende Oxid-Mischungen. Andere anorganische Oxide, die allein oder in Kombination mit den zuletzt genannten bevorzugten oxiden Trägern eingesetzt werden können, sind z.B. MgO, ZrO₂, TiO₂ oder B₂O₃, um nur einige zu nennen.

Die verwendeten Trägermaterialien weisen eine spezifische Oberfläche im Bereich von 10 bis 1000 m²/g, ein Porenvolumen im Bereich von 0,1 bis 5 ml/g und eine mittlere Partikelgröße von 1 bis 500 µm auf. Bevorzugt sind Träger mit einer spezifischen Oberfläche im Bereich von 50 bis 500 µm, einem Porenvolumen im Bereich zwischen 0,5 und 3,5 ml/g und einer mittleren Partikelgröße im Bereich von 5 bis 350 µm. Besonders bevorzugt sind Träger mit einer spezifischen Oberfläche im Bereich von 200 bis 400 m²/g, einem Porenvolumen im Bereich zwischen 0,8 bis 3,0 ml/g und einer mittleren Partikelgröße von 10 bis 200 µm.

Wenn das verwendete Trägermaterial von Natur aus einen geringen Feuchtigkeitsgehalt oder Restlösemittelgehalt aufweist, kann eine Dehydratisierung oder Trocknung vor der Verwendung unterbleiben. Ist dies nicht der Fall, wie bei dem Einsatz von Silicagel als Trägermaterial, ist eine Dehydratisierung oder Trocknung empfehlenswert. Die thermische Dehydratisierung oder Trocknung des Trägermaterials kann unter Vakuum und gleichzeitiger Inertgasüberlagerung (z.B.

Stickstoff) erfolgen. Die Trocknungstemperatur liegt im Bereich zwischen 100 und 1000°C, vorzugsweise zwischen 200 und 800°C. Der Parameter Druck ist in diesem Fall nicht entscheidend. Die Dauer des Trocknungsprozesses kann zwischen 1 und 24 Stunden betragen. Kürzere oder längere Trocknungsdauern sind möglich, vorausgesetzt, daß unter den gewählten Bedingungen die Gleichgewichtseinstellung mit den Hydroxylgruppen auf der Trägeroberfläche erfolgen kann, was normalerweise zwischen 4 und 8 Stunden erfordert.

Eine Dehydratisierung oder Trocknung des Trägermaterials ist auch auf chemischem Wege möglich, indem das adsorbierte Wasser und die Hydroxylgruppen auf der Oberfläche mit geeigneten Inertisierungsmitteln zur Reaktion gebracht werden.

Durch die Umsetzung mit dem Inertisierungsreagenz können die Hydroxylgruppen vollständig oder auch teilweise in eine Form überführt werden, die zu keiner negativen Wechselwirkung mit den katalytisch aktiven Zentren führt. Geeignete

Inertisierungsmittel sind beispielsweise Siliciumhalogenide und Silane, wie

Siliciumtetrachlorid, Chlortrimethylsilan, Dimethylaminotrichlorsilan oder metallorganische Verbindungen von Aluminium-, Bor und Magnesium wie

beispielsweise Trimethylaluminium, Triethylaluminium, Triisobutylaluminium,

Triethylboran, Dibutylmagnesium. Die chemische Dehydratisierung oder

Inertisierung des Trägermaterials erfolgt beispielsweise dadurch, daß man unter

Luft- und Feuchtigkeitsausschluß eine Suspension des Trägermaterials in einem geeigneten Lösemittel mit dem Inertisierungsreagenz in reiner Form oder gelöst in einem geeigneten Lösemittel zur Reaktion bringt. Geeignete Lösemittel sind z.B.

aliphatische oder aromatische Kohlenwasserstoffe wie Pentan, Hexan, Heptan,

Toluol oder Xylol. Die Inertisierung erfolgt bei Temperaturen zwischen 25°C und

120°C, bevorzugt zwischen 50 und 70°C. Höhere und niedrigere Temperaturen sind möglich. Die Dauer der Reaktion beträgt zwischen 30 Minuten und 20 Stunden,

bevorzugt 1 bis 5 Stunden. Nach dem vollständigen Ablauf der chemischen

Dehydratisierung wird das Trägermaterial durch Filtration unter Inertbedingungen

isoliert, ein- oder mehrmals mit geeigneten inerten Lösemitteln wie sie bereits zuvor


beschrieben worden sind gewaschen und anschließend im Inertgasstrom oder am Vakuum getrocknet.

Organische Trägermaterialien wie feinteilige Polyolefinpulver (z.B. Polyethylen, Polypropylen oder Polystyrol) können auch verwendet werden und sollten ebenfalls vor dem Einsatz von anhaftender Feuchtigkeit, Lösemittelresten oder anderen Verunreinigungen durch entsprechende Reinigungs- und Trocknungsoperationen befreit werden.

Die erfindungsgemäßen chemische Verbindungen der Formel (II) kann zusammen mit einer Organometallübergangsverbindung als Katalysatorsystem verwendet werden. Als Organometallübergangsverbindung werden z.B.

Metallocenverbindungen eingesetzt. Dies können z.B. verbrückte oder unverbrückte Biscyclopentadienylkomplexe sein, wie sie z.B. in EP-A-0 129 368, EP-A-0 561 479, EP-A-0 545 304 und EP-A-0 576 970 beschrieben sind, Monocyclopentadienylkomplexe, wie verbrückte Amidocyclopentadienylkomplexe die z.B. in EP-A-0 416 815 beschrieben sind, mehrkernige Cyclopentadienylkomplexe wie in EP-A-0 632 063 beschrieben, π -Ligand substituierte Tetrahydropentalene wie in EP-A-0 659 758 beschrieben oder π -Ligand substituierte Tetrahydroindene wie in EP-A-0 661 300 beschrieben. Außerdem können Organometallverbindungen eingesetzt werden in denen der komplexierende Ligand kein Cyclopentadienyl-Liganden enthält. Beispiele hierfür sind Diamin-Komplexe der III. und IV. Nebengruppe des Periodensystems der Elemente, wie sie z.B. bei D.H. McConville, et al, *Macromolecules*, 1996, 29, 5241 und D.H. McConville, et al, *J. Am. Chem. Soc.*, 1996, 118, 10008 beschrieben werden. Außerdem können Diimin-Komplexe der VIII. Nebengruppe des Periodensystems der Elemente (z.B. Ni^{2+} oder Pd^{2+} Komplexe), wie sie bei Brookhart et al, *J. Am. Chem. Soc.* 1995, 117, 6414 und Brookhart et al, *J. Am. Chem. Soc.*, 1996, 118, 267 beschrieben werden, eingesetzt werden. Ferner lassen sich 2,6-bis(imino)pyridyl-Komplexe der VIII. Nebengruppe des Periodensystems der Elemente (z.B. Co^{2+} oder Fe^{2+} Komplexe), wie sie bei Brookhart et al, *J. Am. Chem. Soc.* 1998, 120, 4049 und Gibson et al, *Chem. Commun.* 1998, 849 beschrieben werden, einsetzen.

Bevorzugte Metallocenverbindungen sind unverbrückte oder verbrückte Verbindungen der Formel (V),

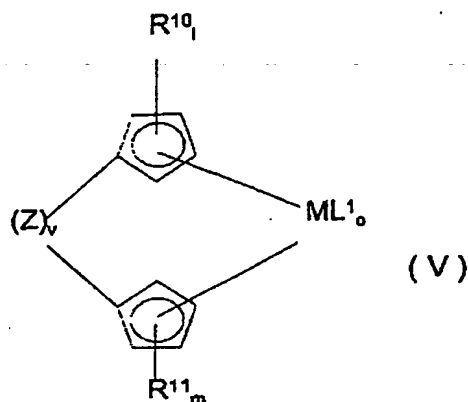

worin

- M ein Metall der III., IV., V. oder VI. Nebengruppe des Periodensystems der Elemente ist, insbesondere Ti, Zr oder Hf,
- R^{10} gleich oder verschieden sind und ein Wasserstoffatom oder SiR_3^{12} sind, worin R^{12} gleich oder verschieden ein Wasserstoffatom oder eine C_1-C_{40} -kohlenstoffhaltige Gruppe, bevorzugt C_1-C_{20} -Alkyl, C_1-C_{10} -Fluoralkyl, C_1-C_{10} -Alkoxy, C_6-C_{20} -Aryl, C_6-C_{10} -Fluoraryl, C_6-C_{10} -Aryloxy, C_2-C_{10} -Alkenyl, C_7-C_{40} -Arylalkyl, C_7-C_{40} -Alkylaryl oder C_8-C_{40} -Arylalkenyl, oder R^{10} eine C_1-C_{30} -kohlenstoffhaltige Gruppe, bevorzugt C_1-C_{25} -Alkyl, wie Methyl, Ethyl, tert.-Butyl, Cyclohexyl oder Octyl, C_2-C_{25} -Alkenyl, C_3-C_{15} -Alkylalkenyl, C_6-C_{24} -Aryl, C_5-C_{24} -Heteroaryl wie Pyridyl, Furyl oder Chinolyl, C_7-C_{30} -Arylalkyl, C_7-C_{30} -Alkylaryl, fluorhaltiges C_1-C_{25} -Alkyl, fluorhaltiges C_6-C_{24} -Aryl, fluorhaltiges C_7-C_{30} -Arylalkyl, fluorhaltiges C_7-C_{30} -Alkylaryl oder C_1-C_{12} -Alkoxy ist, oder zwei oder mehrere Reste R^{10} können so miteinander verbunden sein, daß die Reste R^{10} und die sie verbindenden Atome des Cyclopentadienylinges ein C_4-C_{24} -Ringsystem bilden, welches seinerseits substituiert sein kann,
- R^{11} gleich oder verschieden sind und ein Wasserstoffatom oder SiR_3^{12} sind, worin R^{12} gleich oder verschieden ein Wasserstoffatom oder eine C_1-C_{40} -kohlenstoffhaltige Gruppe, bevorzugt C_1-C_{20} -Alkyl, C_1-C_{10} -Fluoralkyl, C_1-C_{10} -Alkoxy, C_6-C_{14} -Aryl, C_6-C_{10} -Fluoraryl, C_6-C_{10} -Aryloxy, C_2-C_{10} -Alkenyl, C_7-C_{40} -Arylalkyl, C_7-C_{40} -Alkylaryl oder C_8-C_{40} -Arylalkenyl, oder R^B eine C_1-C_{30} -kohlenstoffhaltige Gruppe, bevorzugt C_1-C_{25} -Alkyl, wie Methyl, Ethyl, tert.-Butyl,

Cyclohexyl oder Octyl, C₂-C₂₅-Alkenyl, C₃-C₁₅-Alkylalkenyl, C₆-C₂₄-Aryl, C₅-C₂₄-Heteroaryl, wie. Pyridyl, Furyl oder Chinolyl, C₇-C₃₀-Arylalkyl, C₇-C₃₀-Alkylaryl, fluorhaltiges C₁-C₂₅-Alkyl, fluorhaltiges C₆-C₂₄-Aryl, fluorhaltiges C₇-C₃₀-Arylalkyl, fluorhaltiges C₇-C₃₀-Alkylaryl oder C₁-C₁₂-Alkoxy ist, oder zwei oder mehrere Reste R¹¹ können so miteinander verbunden sein, daß die Reste R¹¹ und die sie verbindenden Atome des Cyclopentadienylringes ein C₄-C₂₄-Ringsystem bilden, welches seinerseits substituiert sein kann,

l gleich 5 für v = 0, und l gleich 4 für v = 1 ist,

m gleich 5 für v = 0, und m gleich 4 für v = 1 ist,

L¹ gleich oder verschieden sein können und ein Wasserstoffatom, eine C₁-C₁₀-Kohlenwasserstoffgruppe wie C₁-C₁₀-Alkyl oder C₆-C₁₀-Aryl, ein Halogenatom, oder OR¹⁶, SR¹⁶, OSiR₃¹⁶, SiR₃¹⁶, PR₂¹⁶ oder NR₂¹⁶ bedeuten, worin R¹⁶ ein Halogenatom, eine C₁-C₁₀ Alkylgruppe, eine halogenierte C₁-C₁₀ Alkylgruppe, eine C₆-C₂₀ Arylgruppe oder eine halogenierte C₆-C₂₀ Arylgruppe sind, oder L¹ sind eine Toluolsulfonyl-, Trifluoracetyl-, Trifluoracetoxyl-, Trifluormethansulfonyl-, Nonafluorbutansulfonyl- oder 2,2,2-Trifluorethansulfonyl-Gruppe,

o eine ganze Zahl von 1 bis 4, bevorzugt 2 ist,

Z ein verbrückendes Strukturelement zwischen den beiden

Cyclopentadienylringen bezeichnet und v ist 0 oder 1.

Beispiele für Z sind Gruppen M³R¹³R¹⁴, worin M³ Kohlenstoff, Silizium, Germanium oder Zinn ist und R¹³ und R¹⁴ gleich oder verschieden eine C₁-C₂₀-

kohlenwasserstoffhaltige Gruppe wie C₁-C₁₀-Alkyl, C₆-C₁₄-Aryl oder Trimethylsilyl bedeuten. Bevorzugt ist Z gleich CH₂, CH₂CH₂, CH(CH₃)CH₂, CH(C₄H₉)C(CH₃)₂, C(CH₃)₂, (CH₃)₂Si, (CH₃)₂Ge, (CH₃)₂Sn, (C₆H₅)₂Si, (C₆H₅)(CH₃)Si, Si(CH₃)(SiR²⁰R²¹R²²), (C₆H₅)₂Ge, (C₆H₅)₂Sn, (CH₂)₄Si, CH₂Si(CH₃)₂, o-C₆H₄ oder 2,2'-(C₆H₄)₂. Wobei R²⁰, R²¹, R²² gleich oder verschieden eine C₁-C₂₀-

kohlenwasserstoff-haltige Gruppe wie C₁-C₁₀-Alkyl oder C₆-C₁₄-Aryl bedeuten. Z kann auch mit einem oder mehreren Resten R¹⁰ und/oder R¹¹ ein mono- oder polycyclisches Ringsystem bilden.

Bevorzugt sind chirale verbrückte Metallocenverbindungen der Formel (V), insbesondere solche in denen v gleich 1 ist und einer oder beide Cyclopentadienylringe so substituiert sind, daß sie einen Indenylring darstellen. Der Indenylring ist bevorzugt substituiert, insbesondere in 2-, 4-, 2,4,5-, 2,4,6-, 2,4,7 oder 2,4,5,6-Stellung, mit C_1 - C_{20} -kohlenstoffhaltigen Gruppen, wie C_1 - C_{10} -Alkyl oder C_6 - C_{20} -Aryl, wobei auch zwei oder mehrere Substituenten des Indenylrings zusammen ein Ringsystem bilden können.

Chirale verbrückte Metallocenverbindungen der Formel (III) können als reine racemische oder reine meso Verbindungen eingesetzt werden. Es können aber auch Gemische aus einer racemischen Verbindung und einer meso Verbindung verwendet werden.

Beispiele für Metallocenverbindungen sind:

Dimethylsilandiylbis(indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(4-naphthyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-benzo-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-(1-naphthyl)-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-(2-naphthyl)-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-phenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-t-butyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-isopropyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-ethyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-acenaphth-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2,4-dimethyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-ethyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-ethyl-4-ethyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-ethyl-4-phenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4,6 diisopropyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4,5 diisopropyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2,4,6-trimethyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2,5,6-trimethyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2,4,7-trimethyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-5-isobutyl-indenyl)zirkoniumdichlorid

5 Dimethylsilandiylbis(2-methyl-5-t-butyl-indenyl)zirkoniumdichlorid

Methyl(phenyl)silandiylbis(2-methyl-4-phenyl-indenyl)zirkoniumdichlorid

Methyl(phenyl)silandiylbis(2-methyl-4,6-diisopropyl-indenyl)zirkoniumdichlorid

Methyl(phenyl)silandiylbis(2-methyl-4-isopropyl-indenyl)zirkoniumdichlorid

Methyl(phenyl)silandiylbis(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

10 Methyl(phenyl)silandiylbis(2-methyl-4,5-(methylbenzo)-indenyl)zirkoniumdichlorid

Methyl(phenyl)silandiylbis(2-methyl-4,5-(tetramethylbenzo)-indenyl)

zirkoniumdichlorid

Methyl(phenyl)silandiylbis(2-methyl-4-acenaphth-indenyl)zirkoniumdichlorid

Methyl(phenyl)silandiylbis(2-methyl-indenyl)zirkoniumdichlorid

15 Methyl(phenyl)silandiylbis(2-methyl-5-isobutyl-indenyl)zirkoniumdichlorid

1,2-Ethandiylbis(2-methyl-4-phenyl-indenyl)zirkoniumdichlorid

1,4-Butandiylbis(2-methyl-4-phenyl-indenyl)zirkoniumdichlorid

1,2-Ethandiylbis(2-methyl-4,6-diisopropyl-indenyl)zirkoniumdichlorid

1,4-Butandiylbis(2-methyl-4-isopropyl-indenyl)zirkoniumdichlorid

20 1,4-Butandiylbis(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

1,2-Ethandiylbis(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

1,2-Ethandiylbis(2,4,7-trimethyl-indenyl)zirkoniumdichlorid

1,2-Ethandiylbis(2-methyl-indenyl)zirkoniumdichlorid

1,4-Butandiylbis(2-methyl-indenyl)zirkoniumdichlorid

25 [4-(η^5 -Cyclopentadienyl)-4,6,6-trimethyl-(η^5 -4,5-tetrahydropentalen)]-
dichlorozirkonium

[4-(η^5 -3'-Trimethylsilyl-cyclopentadienyl)-4,6,6-trimethyl-(η^5 -4,5-tetrahydropentalen)]-
dichlorozirkonium

[4-(η^5 -3'-Isopropyl-cyclopentadienyl)-4,6,6-trimethyl-(η^5 -4,5-tetrahydropentalen)]-

30 dichlorozirkonium

[4-(η^5 -Cyclopentadienyl)-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-dichlorotitan

[4-(η^5 -Cyclopentadienyl)-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-

dichlorozirkonium

[4-(η^5 -Cyclopentadienyl)-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-

dichlorohafnium

[4-(η^5 -3'-tert. Butyl-cyclopentadienyl)-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-

5 dichlorotitan

4-(η^5 -3'-Isopropylcyclopentadienyl)-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-

dichlorotitan

4-(η^5 -3'-Methylcyclopentadienyl)-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-

dichlorotitan

10 4-(η^5 -3'-Trimethylsilyl-cyclopentadienyl)-2-trimethylsilyl-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-dichlorotitan

4-(η^5 -3'-tert. Butyl-cyclopentadienyl)-4,7,7-trimethyl-(η^5 -4,5,6,7-tetrahydroindenyl)]-

dichlorozirkonium

(Tertbutylamido)-(tetramethyl- η^5 -cyclopentadienyl)-dimethylsilyl-dichlorotitan

15 (Tertbutylamido)-(tetramethyl- η^5 -cyclopentadienyl)-1,2-ethandiyl-dichlorotitan-dichlorotitan

(Methylamido)-(tetramethyl- η^5 -cyclopentadienyl)-dimethylsilyl-dichlorotitan

(Methylamido)-(tetramethyl- η^5 -cyclopentadienyl)-1,2-ethandiyl-dichlorotitan

(Tertbutylamido)-(2,4-dimethyl-2,4-pentadien-1-yl)-dimethylsilyl-dichlorotitan

20 Bis-(cyclopentadienyl)-zirkoniumdichlorid

Bis-(n-butylcyclopentadienyl)-zirkoniumdichlorid

Bis-(1,3-dimethylcyclopentadienyl)-zirkoniumdichlorid

Tetrachloro-[1-[bis(η^5 -1H-inden-1-yliden)methylsilyl]-3- η^5 -cyclopenta-2,4-dien-1-yliden)-3- η^5 -9H-fluoren-9-yliden)butan]di-zirkonium

25 Tetrachloro-[2-[bis(η^5 -2-methyl-1H-inden-1-yliden)methoxysilyl]-5-(η^5 -2,3,4,5-tetramethylcyclopenta-2,4-dien-1-yliden)-5-(η^5 -9H-fluoren-9-yliden)hexan]di-zirkonium

Tetrachloro-[1-[bis(η^5 -1H-inden-1-yliden)methylsilyl]-6-(η^5 -cyclopenta-2,4-dien-1-yliden)-6-(η^5 -9H-fluoren-9-yliden)-3-oxaheptan]di-zirkonium

30 Dimethylsilandiylbis(2-methyl-4-(tert-butyl-phenyl-indenyl)-zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-(4-methyl-phenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-(4-ethyl-phenyl-indenyl)zirkoniumdichlorid

- Dimethylsilandiylbis(2-methyl-4-(4-trifluormethyl-phenyl-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-methyl-4-(4-methoxy-phenyl-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4-tert-butyl-phenyl-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4-methyl-phenyl-indenyl)zirkoniumdichlorid
5 Dimethylsilandiylbis(2-ethyl-4-(4-ethyl-phenyl-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4-trifluormethyl-phenyl-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4-methoxy-phenyl-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-methyl-4-(4-tert-butyl-phenyl-indenyl)zirkoniumdimethyl
Dimethylsilandiylbis(2-methyl-4-(4-methyl-phenyl-indenyl)zirkoniumdimethyl
10 Dimethylsilandiylbis(2-methyl-4-(4-ethyl-phenyl-indenyl)zirkoniumdimethyl
Dimethylsilandiylbis(2-methyl-4-(4-trifluormethyl-phenyl-indenyl)zirkoniumdimethyl
Dimethylsilandiylbis(2-methyl-4-(4-methoxy-phenyl-indenyl)zirkoniumdimethyl
Dimethylsilandiylbis(2-ethyl-4-(4-tert-butyl-phenyl-indenyl)zirkoniumdimethyl
Dimethylsilandiylbis(2-ethyl-4-(4-methyl-phenyl-indenyl)zirkoniumdimethyl
15 Dimethylsilandiylbis(2-ethyl-4-(4-ethyl-phenyl-indenyl)zirkoniumdiethyl
Dimethylsilandiylbis(2-ethyl-4-(4-trifluormethyl-phenyl-indenyl)zirkoniumdimethyl
Dimethylsilandiylbis(2-ethyl-4-(4-methoxy-phenyl-indenyl)zirkoniumdimethyl
Dimethylsilandiylbis(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl)hafnuimdichlorid
20 Dimethylsilandiylbis(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl)titandichlorid
Dimethylsilandiylbis(2-methyl-4-(4'-methyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-methyl-4-(4'-n-propyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-methyl-4-(4'-n-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-methyl-4-(4'-hexyl-phenyl)-indenyl)zirkoniumdichlorid
25 Dimethylsilandiylbis(2-methyl-4-(4'-sec-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4'-methyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4'-ethyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4'-n-propyl-phenyl)-indenyl)zirkoniumdichlorid
30 Dimethylsilandiylbis(2-ethyl-4-(4'-n-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4'-hexyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4'-pentyl-phenyl)-indenyl)zirkoniumdichlorid

- Dimethylsilandiylbis(2-ethyl-4-(4'-cyclohexyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4'-sec-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-propyl-4-phenyl)-indenyl)zirkoniumdichlorid
5 Dimethylsilandiylbis(2-n-propyl-4-(4'-methyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-propyl-4-(4'-ethyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-propyl-4-(4'-iso-propyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-propyl-4-(4'-n-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-propyl-4-(4'-hexyl-phenyl)-indenyl)zirkoniumdichlorid
10 Dimethylsilandiylbis(2-n-propyl-4-(4'-cyclohexyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-propyl-4-(4'-sec-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-propyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-(4'-methyl-phenyl)-indenyl)zirkoniumdichlorid
15 Dimethylsilandiylbis(2-n-butyl-4-(4'-ethyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-(4'-n-propyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-(4'-iso-propyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-(4'-n-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-(4'-hexyl-phenyl)-indenyl)zirkoniumdichlorid
20 Dimethylsilandiylbis(2-n-butyl-4-(4'-cyclohexyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-(4'-sec-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-n-butyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-(4'-methyl-phenyl)-indenyl)zirkoniumdichlorid
25 Dimethylsilandiylbis(2-hexyl-4-(4'-ethyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-(4'-n-propyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-(4'-iso-propyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-(4'-n-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-(4'-hexyl-phenyl)-indenyl)zirkoniumdichlorid
30 Dimethylsilandiylbis(2-hexyl-4-(4'-cyclohexyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-(4'-sec-butyl-phenyl)-indenyl)zirkoniumdichlorid
Dimethylsilandiylbis(2-hexyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-(4'-tert.-butyl-phenyl)-
indenyl)zirkoniumbis(dimethylamid)

Dimethylsilandiylbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdibenzyl

Dimethylsilandiylbis(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdimethyl

5 Dimethylgermandiylbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

Dimethylgermandiylbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)hafniumdichlorid

Dimethylgermandiylbis(2-propyl-4-(4'-tert.-butyl-phenyl)-indenyl)titandichlorid

Dimethylgermandiylbis(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

Ethylidenbis(2-ethyl-4-phenyl)-indenyl)zirkoniumdichlorid

10 Ethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

Ethylidenbis(2-n-propyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

Ethylidenbis(2-n-butyl-4-(4'-tert.-butyl-phenyl)-indenyl)titandichlorid

Ethylidenbis(2-hexyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdibenzyl

Ethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)hafniumdibenzyl

15 Ethylidenbis(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl)titandibenzyl

Ethylidenbis(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

Ethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)hafniumdimethyl

Ethylidenbis(2-n-propyl-4-phenyl)-indenyl)titandimethyl

Ethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumbis(dimethylamid)

20 Ethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)hafniumbis(dimethylamid)

Ethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)titanbis(dimethylamid)

Methylethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

Methylethylidenbis(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)hafniumdichlorid

Phenylphosphandiyl(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl)zirkoniumdichlorid

25 Phenylphosphandiyl(2-methyl-4-(4'-tert.-butyl-phenyl)-indenyl) zirkoniumdichlorid

Phenylphosphandiyl(2-ethyl-4-(4'-tert.-butyl-phenyl)-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)
30 zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-methylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)
zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)
zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)
zirkoniumdichlorid

20 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl)zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-ethylphenyl-
indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-ethylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

5 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-n-propylphenyl-indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-isopropylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-n-butylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)
zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)
zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-s-butylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-s-butylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-s-butylphenyl-
indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)
zirkoniumdichlorid

20 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-s-
butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-s-
butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-s-butylphenyl-
indenyl)zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-s-butylphenyl-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-s-butylphenyl-
indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-s-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

5 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-
pentylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-
pentylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-n-pentylphenyl-
indenyl)zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-n-pentylphenyl-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-n-pentylphenyl-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl)
zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-n-pentylphenyl-
indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-n-pentylphenyl-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-n-pentylphenyl-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl)
zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-n-pentylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)
zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-n-hexylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl)
zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl)
zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-
cyclohexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-
cyclohexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-
cyclohexylphenyl-indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-cyclohexylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-cyclohexylphenyl-
indenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-
cyclohexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-
cyclohexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-cyclohexylphenyl-
indenyl)zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-cyclohexylphenyl-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-cyclohexylphenyl-
indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-cyclohexylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-cyclohexylphenyl-
indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl)zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-cyclohexylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl)zirkoniumdichlorid

5 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl)zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-trimethylsilylphenyl-indenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl)zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl)zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-adamantylphenyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-(4'-tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-(4'-tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-
tris(trifluormethyl)methylphenyl-indenyl) zirkoniumdichlorid

5 Dimethylsilandiyl(2-methyl-4-azapentalen)(2-ethyl-4-(4'-tert-butylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5,6-di-hydro-4-azapentalen)(2-ethyl-4-(4'-tert-butylphenyl-
indenyl) zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-4-azapentalen)(2-ethyl-4-(4'-tert-butylphenyl-
tetrahydroindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-n-butyl-4-(4'-tert-butylphenyl-indenyl)
zirkoniumdichlorid

Ethyliden(2-methyl-6-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)
zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-N-trimethylsilyl-4-azapentalen)(2-methyl-4-(4'-tert-
butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-tolyl-5-azapentalen)(2-n-propyl-4-(4'-tert-butylphenyl-
indenyl) zirkoniumdichlorid

20 Dimethylgemyldiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-(4'-tert-
butylphenyl-indenyl) zirkoniumdichlorid

Methylethyliden(2,5-dimethyl-4-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2,5-di-iso-propyl-6-azapentalen)(2-methyl-4-(4'-tert-butylphenyl-
indenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2,6-dimethyl-4-(4'-tert-
butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(6'-tert-
butyl-naphthyl-indenyl) zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-(6'-tert-
butylanthracenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-phosphapentalen)(2-methyl-4-(4'-tert-butylphenyl-
indenyl)zirkoniumdichlorid

Diphenylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Methylphenylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

5 Methyliden(2,5-dimethyl-4-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl)zirkoniumdichlorid

Dimethylmethyliden(2,5-dimethyl-6-thiapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

10 Diphenylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Diphenylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-(4'-tert-butylphenyl-indenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methylindenyl) zirkoniumdichlorid

15 Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methylindenyl) zirkoniumdichlorid

20 Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methylindenyl) zirkoniumdichlorid

25 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methylindenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methylindenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methylindenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methylindenyl) zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methylindenyl)zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methylindenyl)zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methylindenyl)zirkoniumdichlorid
Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methylindenyl) zirkoniumdichlorid
5 Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methylindenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-4-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-5-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-6-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(indenyl) zirkoniumdichlorid
10 Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(indenyl) zirkoniumdichlorid
15 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-4-thiapentalen)(indenyl)zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-5-thiapentalen)(indenyl)zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-6-thiapentalen)(indenyl)zirkoniumdichlorid
Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(indenyl) zirkoniumdichlorid
20 Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-4-oxapentalen)(indenyl)zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-5-oxapentalen)(indenyl)zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-6-oxapentalen)(indenyl)zirkoniumdichlorid
Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(indenyl) zirkoniumdichlorid
25 Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(indenyl) zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4-phenyl-indenyl)
zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4-phenyl-indenyl)
zirkoniumdichlorid
30 Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4-phenyl-indenyl)
zirkoniumdichlorid
Dimethylsilandiyl(2-methyl-N-phenyl-4-azapental n)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4-phenyl-indenyl)

5 zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

10 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4-phenyl-

15 indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4-phenyl-

indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4-phenyl-

indenyl)zirkoniumdichlorid

20 Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4-phenyl-

25 indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4-phenyl-

indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4-phenyl-

indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4-phenyl-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-azapentalen)(2-methyl-4,5-benzo-indenyl)

5 zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-4-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

10 Dimethylsilandiyl(2-methyl-N-phenyl-5-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-N-phenyl-6-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-azapentalen)(2-methyl-4,5-benzo-indenyl)

15 zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-N-phenyl-4-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

20 Dimethylsilandiyl(2,5-dimethyl-N-phenyl-6-azapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-thiapentalen)(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-thiapentalen)(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

25 indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-thiapentalen)(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-thiapentalen)(2-methyl-4,5-benzo-indenyl)zirkoniumdichlorid

30 Dimethylsilandiyl(2,5-dimethyl-6-thiapentalen)(2-methyl-4,5-benzo-indenyl)

zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-4-oxapentalen)(2-methyl-4,5-benzo-

indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-5-oxapentalen)(2-methyl-4,5-benzo-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2-methyl-6-oxapentalen)(2-methyl-4,5-benzo-
indenyl)zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-4-oxapentalen)(2-methyl-4,5-benzo-indenyl)
zirkoniumdichlorid

Dimethylsilandiyl(2,5-dimethyl-6-oxapentalen)(2-methyl-4,5-benzo-indenyl)
zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-azapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-5-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-6-azapentalen) zirkoniumdichlorid.

Dimethylsilandiylbis(2-methyl-N-phenyl-4-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-N-phenyl-5-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-N-phenyl-6-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-4-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-6-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-N-phenyl-4-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-N-phenyl-6-azapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-thiapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-5-thiapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-6-thiapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-4-thiapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-6-thiapentalen) zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-4-oxapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-5-oxapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2-methyl-6-oxapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-4-oxapentalen)zirkoniumdichlorid

Dimethylsilandiylbis(2,5-dimethyl-6-oxapentalen)zirkoniumdichlorid

Des weiteren sind die Metallocene, bei denen das Zirkoniumfragment „-zirkonium-
dichlorid,, die Bedeutungen

- Zirkonium-monochloro-mono-(2,4-di-tert.-butyl-phenolat)
Zirkonium-monochloro-mono-(2,6-di-tert.-butyl-phenolat)
Zirkonium-monochloro-mono-(3,5-di-tert.-butyl-phenolat)
Zirkonium-monochloro-mono-(2,6-di-sec.-butyl-phenolat)
5 Zirkonium-monochloro-mono-(2,4-di-methylphenolat)
Zirkonium-monochloro-mono-(2,3-di-methylphenolat)
Zirkonium-monochloro-mono-(2,5-di-methylphenolat)
Zirkonium-monochloro-mono-(2,6-di-methylphenolat)
Zirkonium-monochloro-mono-(3,4-di-methylphenolat)
10 Zirkonium-monochloro-mono-(3,5-di-methylphenolat)
Zirkonium-monochloro-monophenolat
Zirkonium-monochloro-mono-(2-methylphenolat)
Zirkonium-monochloro-mono-(3-methylphenolat)
Zirkonium-monochloro-mono-(4-methylphenolat)
15 Zirkonium-monochloro-mono-(2-ethylphenolat)
Zirkonium-monochloro-mono-(3-ethylphenolat)
Zirkonium-monochloro-mono-(4-ethylphenolat)
Zirkonium-monochloro-mono-(2-sec.-butylphenolat)
Zirkonium-monochloro-mono-(2-tert.-butylphenolat)
20 Zirkonium-monochloro-mono-(3-tert.-butylphenolat)
Zirkonium-monochloro-mono-(4-sec.-butylphenolat)
Zirkonium-monochloro-mono-(4-tert.-butylphenolat)
Zirkonium-monochloro-mono-(2-isopropyl-5-methylphenolat)
Zirkonium-monochloro-mono-(4-isopropyl-3-methylphenolat)
25 Zirkonium-monochloro-mono-(5-isopropyl-2-methylphenolat)
Zirkonium-monochloro-mono-(5-isopropyl-3-methylphenolat)
Zirkonium-monochloro-mono-(2,4-bis-(2-methyl-2-butyl)-phenolat)
Zirkonium-monochloro-mono-(2,6-di-tert.-butyl-4-methyl-phenolat)
Zirkonium-monochloro-mono-(4-nonylphenolat)
30 Zirkonium-monochloro-mono-(1-naphtholat)
Zirkonium-monochloro-mono-(2-naphtholat)
Zirkonium-monochloro-mono-(2-phenylphenolat)

Zirkonium-monochloro-mono-(tert. butoxid)

Zirkonium-monochloro-mono-(N-methylanilid)

Zirkonium-monochloro-mono-(2-tert.-butylanilid)

Zirkonium-monochloro-mono-(tert.-butylamid)

5 Zirkonium-monochloro-mono-(di-iso.-propylamid)

Zirkonium-monochloro-mono-methyl

Zirkonium-monochloro-mono-benzyl


Zirkonium-monochloro-mono-neopentyl, hat, Beispiele für die erfindungsgemäßen Metallocene.

10

Weiterhin bevorzugt sind die entsprechenden Zirkondimethyl-Verbindungen, die entsprechenden Zirkon- η^4 -Butadien-Verbindungen, sowie die entsprechenden Verbindungen mit 1,2-(1-methyl-ethandiyl)-, 1,2-(1,1-dimethyl-ethandiyl)- und 1,2(1,2-dimethyl-ethandiyl)-Brücke.

15

Das erfindungsgemäße Katalysatorsystem kann zusätzlich noch eine Organometallverbindung der Formel (IV)



worin

20

M^4 ein Element der I., II. und III. Hauptgruppe des Periodensystems der Elemente ist, vorzugsweise Lithium, Magnesium und Aluminium, insbesondere Aluminium, ist

R^9 gleich oder verschieden ein Wasserstoffatom, ein Halogenatom, eine C_1 - C_{40} -kohlenstoffhaltige Gruppe wie eine C_1 - C_{20} - Alkyl-, C_6 - C_{40} -Aryl-, C_7 - C_{40} -Aryl-alkyl oder C_7 - C_{40} -Alkyl-aryl-Gruppe, bedeutet,

25

p eine ganze Zahl von 1 bis 3 und

q eine ganze Zahl von 1 bis 4 ist, enthalten.

30

Bei den Organometallverbindungen der Formel (IV) handelt es sich ebenfalls um neutrale Lewissäuren

Beispiele für die bevorzugten Organometall-Verbindungen der Formel (IV) sind Trimethylaluminium, Triethylaluminium, Triisopropylaluminium, Trihexylaluminium, Trioctylaluminium, Tri-n-butylaluminium, Tri-n-propylaluminium, Trisoprenaluminium, Dimethylaluminiummonochlorid, Diethylaluminiummonochlorid, Diisobutylaluminiummonochlorid, Methylaluminiumsesquichlorid, Ethylaluminiumsesquichlorid, Dimethylaluminiumhydrid, Diethylaluminiumhydrid, Diisopropylaluminiumhydrid, Dimethylaluminium(trimethylsiloxid), Dimethylaluminium(triethylsiloxid), Phenylalan, Pentafluorphenylalan, o-Tolylalan.

Das erfindungsgemäße Katalysatorsystem ist erhältlich durch Umsetzung einer Lewis Base der Formel (I) und einer Organobor- oder Organoaluminiumverbindung, die aus Einheiten der Formel (II) aufgebaut ist, mit einem Träger. Anschließend erfolgt die Umsetzung mit einer Lösung oder Suspension aus einem oder mehreren Metallocenverbindungen der Formel (V) und optional einer oder mehrerer Organometallverbindungen der Formel (IV).

Die Aktivierung des Katalysatorsystems kann dadurch wahlweise vor dem Einschleusen in den Reaktor vorgenommen werden oder aber erst im Reaktor durchgeführt werden. Ferner wird ein Verfahren zur Herstellung von Polyolefinen beschrieben. Die Zugabe einer weiteren chemischen Verbindung, die als Additiv vor der Polymerisation zudosiert wird, kann zusätzlich von Vorteil sein.

Zur Herstellung des erfindungsgemäßen Katalysatorsystems wird das Trägermaterial in einem organischen Lösemittel suspendiert. Geeignete Lösemittel sind aromatische oder aliphatische Lösemittel, wie beispielsweise Hexan, Heptan, Toluol oder Xylol oder halogenierte Kohlenwasserstoffe, wie Methylenchlorid oder halogenierte aromatische Kohlenwasserstoffe wie o-Dichlorbenzol. Der Träger kann zuvor mit einer Verbindung der Formel (IV) vorbehandelt werden. Anschließend wird eine oder mehrere Verbindungen der Formel (I) zu dieser Suspension gegeben, wobei die Reaktionszeit zwischen 1 Minute und 48 Stunden liegen kann, bevorzugt ist eine Reaktionszeit zwischen 10 Minuten und 2 Stunden. Die Reaktionslösung kann isoliert und anschließend resuspendiert werden oder aber auch direkt mit einer kokatalytisch wirkenden Organoborverbindung, gemäß der Formel (II), umgesetzt

werden. Die Reaktionszeit liegt dabei zwischen 1 Minute und 48 Stunden, wobei eine Reaktionszeit von zwischen 10 Minuten und 2 Stunden bevorzugt ist. Zur Herstellung des erfindungsgemäßen Katalysatorsystems kann eine oder mehrere Lewis-Basen der Formel (I) mit einer oder mehreren kokatalytisch wirksamen Organoborverbindungen, gemäß der Formel (II), umgesetzt werden. Bevorzugt ist die Menge von 1 bis 4 Äquivalenten einer Lewis-Base der Formel (I) mit einem Äquivalent einer kokatalytisch wirksamen Verbindung. Besonders bevorzugt ist die Menge von einem Äquivalent einer Lewis-Base der Formel (I) mit einem Äquivalent einer kokatalytisch wirksamen Verbindung. Das Reaktionsprodukt dieser Umsetzung ist eine metalloceniumbildende Verbindung, die kovalent an das Trägermaterial fixiert ist. Es wird nachfolgend als modifiziertes Trägermaterial bezeichnet. Die Reaktionslösung wird anschließend filtriert und mit einem der oben genannten Lösemittel gewaschen. Danach wird das modifizierte Trägermaterial im Hochvakuum getrocknet. Die Zugabe der einzelnen Komponenten kann aber auch in jeder anderen Reihenfolge durchgeführt werden.

Das Aufbringen einer oder mehrerer Metallocenverbindungen vorzugsweise der Formel (V) und einer oder mehrerer Organometallverbindungen der Formel (IV) auf das modifizierte Trägermaterial geht vorzugsweise so vonstatten, daß eine oder mehrere Metallocenverbindungen der Formel (V) in einem oben beschriebenen Lösemittel gelöst bzw. suspendiert wird und anschließend eine oder mehrere Verbindungen der Formel (IV), die vorzugsweise ebenfalls gelöst bzw. suspendiert ist, umgesetzt werden. Das stöchiometrische Verhältnis an Metallocenverbindung der Formel (V) und einer Organometallverbindung der Formel (IV) beträgt $100 : 1$ bis $10^{-4} : 1$. Vorzugsweise beträgt das Verhältnis $1 : 1$ bis $10^{-2} : 1$. Das modifizierte Trägermaterial kann entweder direkt im Polymerisationsreaktor oder in einem Reaktionskolben in einem oben genannten Lösemittel vorgelegt werden.

Anschließend erfolgt die Zugabe der Mischung aus einer Metallocenverbindung der Formel (V) und einer Organometallverbindung der Formel (IV). Optional kann aber auch eine oder mehrere Metallocenverbindungen der Formel (V) ohne vorherige Zugabe einer Organometallverbindung der Formel (IV) zu dem modifizierten Trägermaterial gegeben werden.

Die Menge an modifizierten Träger zu einer Metallocenverbindung der Formel (V) beträgt vorzugsweise 10g : 1 μ mol bis 10⁻²g : 1 μ mol. Das stöchiometrische Verhältnis an Metallocenverbindung der Formel (V) zu der kokatalytisch wirkenden chemischen Verbindung der Formel (II) beträgt 100 : 1 bis 10⁻⁴ : 1, vorzugsweise 1 : 1 bis 10⁻² : 1.

Das geträgerte Katalysatorsystem kann direkt zur Polymerisation eingesetzt werden. Es kann aber auch nach Entfernen des Lösemittels resuspendiert zur Polymerisation eingesetzt werden. Der Vorteil dieser Aktivierungsmethode liegt darin, daß es die Option bietet das polymerisationsaktive Katalysatorsystem erst im Reaktor entstehen zu lassen. Dadurch wird verhindert, daß beim Einschleusen des luftempfindlichen Katalysators zum Teil Zersetzung eintritt.

Weiterhin wird ein Verfahren zur Herstellung eines Olefinpolymers in Gegenwart des erfindungsgemäßen Katalysatorsystems beschrieben. Die Polymerisation kann eine Homo- oder eine Copolymerisation sein.

Bevorzugt werden Olefine der Formel $R^{\alpha}-CH=CH-R^{\beta}$ polymerisiert, worin R^{α} und R^{β} gleich oder verschieden sind und ein Wasserstoffatom, ein Halogenatom, eine Alkoxy-, Hydroxy-, Alkylhydroxy-, Aldehyd-, Carbonsäure- oder Carbonsäureestergruppe oder einen gesättigten oder ungesättigten Kohlenwasserstoffrest mit 1 bis 20 C-Atomen, insbesondere 1 bis 10 C-Atomen bedeuten, der mit einer Alkoxy-, Hydroxy-, Alkylhydroxy-, Aldehyd-, Carbonsäure- oder Carbonsäureestergruppe substituiert sein kann, oder R^{α} und R^{β} mit den sie verbindenden Atomen einen oder mehrere Ringe bilden. Beispiele für solche Olefine sind 1-Olefine wie Ethylen, Propylen, 1-Buten, 1-Hexen, 4-Methyl-1-penten, 1-Octen, Styrol, cyclische Olefine wie Norbornen, Vinylnorbornen, Tetracyclododecen, Ethylidennorbornen, Diene wie 1,3-Butadien oder 1,4-Hexadien, Biscyclopentadien oder Methacrylsäuremethylester.

Insbesondere werden Propylen oder Ethylen homopolymerisiert, Ethylen mit einem oder mehreren C₃-C₂₀-1-Olefinen, insbesondere Propylen, und /oder einem oder

mehreren C₄-C₂₀-Diene, insbesondere 1,3-Butadien, copolymerisiert oder Norbornen und Ethylen copolymerisiert.

Die Polymerisation wird bevorzugt bei einer Temperatur von - 60 bis 300°C, besonders bevorzugt 30 bis 250°C, durchgeführt. Der Druck beträgt 0,5 bis 2500 bar, bevorzugt 2 bis 1500 bar. Die Polymerisation kann kontinuierlich oder diskontinuierlich, ein- oder mehrstufig, in Lösung, in Suspension, in der Gasphase oder in einem überkritischem Medium durchgeführt werden.

Das geträgerte Katalysatorsystem kann entweder direkt im Polymerisationssystem gebildet werden oder es kann als Pulver oder noch Lösemittel behaftet wieder resuspendiert und als Suspension in einem Inerten Suspensionsmittel in das Polymerisationssystem eindosiert werden.

Mit Hilfe des erfindungsgemäßen Katalysatorsystems kann eine Vorpolymerisation erfolgen. Zur Vorpolymerisation wird bevorzugt das (oder eines der) in der Polymerisation eingesetzte(n) Olefin(e) verwendet.

Zur Herstellung von Olefinpolymeren mit breiter Molekulargewichtsverteilung werden bevorzugt Katalysatorsysteme verwendet, die zwei oder mehr verschiedene Übergangsmetallverbindungen, z. B. Metallocene enthalten.

Zur Entfernung von im Olefin vorhandenen Katalysatorgiften ist eine Reinigung mit einem Aluminiumalkyl, beispielsweise Trimethylaluminium, Triethylaluminium oder Triisobutylaluminium vorteilhaft. Diese Reinigung kann sowohl im Polymerisationssystem selbst erfolgen oder das Olefin wird vor der Zugabe in das Polymerisationssystem mit der Al-Verbindung in Kontakt gebracht und anschließend wieder getrennt.

Als Molmassenregler und/oder zur Steigerung der Aktivität wird, falls erforderlich, Wasserstoff zugegeben. Der Gesamtdruck im Polymerisationssystem beträgt 0,5 bis 2500 bar, bevorzugt 2 bis 1500 bar.

Dabei wird die erfindungsgemäße Verbindung in einer Konzentration, bezogen auf das Übergangsmetall von bevorzugt 10⁻³ bis 10⁻⁸, vorzugsweise 10⁻⁴ bis 10⁻⁷ mol

Übergangsmetall pro dm^3 Lösemittel bzw. pro dm^3 Reaktorvolumen angewendet.

Geeignete Lösemittel zur Darstellung sowohl der erfindungsgemäßen geträgerten chemischen Verbindung als auch des erfindungsgemäßen Katalysatorsystems sind

5 aliphatische oder aromatische Lösemittel, wie beispielsweise Hexan oder Toluol, etherische Lösemittel, wie beispielsweise Tetrahydrofuran oder Diethylether oder halogenierte Kohlenwasserstoffe, wie beispielsweise Methylenchlorid oder halogenierte aromatische Kohlenwasserstoffe wie beispielsweise o-Dichlorbenzol.

10 Vor Zugabe des erfindungsgemäßen Katalysatorsystems bzw. vor Aktivierung des erfindungsgemäßen Katalysatorsystems im Polymerisationssystem kann zusätzlich eine Alkylaluminiumverbindung wie beispielsweise Trimethylaluminium, Triethylaluminium, Triisobutylaluminium, Trioctylaluminium oder Isoprenylaluminium zur Inertisierung des Polymerisationssystems (beispielsweise zur Abtrennung

15 vorhandener Katalysatorgifte im Olefin) in den Reaktor gegeben werden. Diese wird in einer Konzentration von 200 bis 0,001 mmol Al pro kg Reaktorinhalt dem Polymerisationssystem zugesetzt. Bevorzugt werden Triisobutylaluminium und Triethylaluminium in einer Konzentration von 10 bis 0,01 mmol Al pro kg Reaktorinhalt eingesetzt, dadurch kann bei der Synthese eines geträgerten

20 Katalysatorsystems das molare Al/M^1 -Verhältnis klein gewählt werden.

Weiterhin kann beim erfindungsgemäßen Verfahren ein Additiv wie ein Antistatikum verwendet werden, z.B. zur Verbesserung der Kommorphologie des Polymers. Generell können alle Antistatika, die für die Polymerisation geeignet sind, verwendet

25 werden. Beispiele hierfür sind Salzgemische aus Calciumsalzen der Medialansäure und Chromsalze der N-Stearylthranilsäure, die in DE-A-3,543,360 beschreiben werden. Weitere geeignete Antistatika sind z.B. C_{12} - bis C_{22} - Fettsäureseifen von Alkali- oder Erdalkalimetallen, Salze von Sulfonsäureestern, Ester von Polyethylenglycolen mit Fettsäuren, Polyoxyethylenalkylether usw. Eine Übersicht

30 über Antistatika wird in EP-A-0,107,127 angegeben.

Außerdem kann als Antistatikum eine Mischung aus einem Metallsalz der

Medialansäure, einem Metallsalz der Anthranilsäure und einem Polyamin eingesetzt werden, wie in EP-A-0,636,636 beschrieben.

Kommerziell erhältliche Produkte wie Stadis® 450 der Fa. DuPont, eine Mischung aus Toluol, Isopropanol, Dodecylbenzolsulfonsäure, einem Polyamin, einem Copolymer aus Dec-1-en und SO₂ sowie Dec-1-en oder ASA®-3 der Fa. Shell und ARU5R® 163 der Firma ICI können ebenfalls verwendet werden.

Vorzugsweise wird das Antistatikum als Lösung eingesetzt, im bevorzugten Fall von Stadis® 450 werden bevorzugt 1 bis 50 Gew.-% dieser Lösung, vorzugsweise 5 bis 25 Gew.-%, bezogen auf die Masse des eingesetzten Trägerkatalysators (Träger mit kovalent fixierter metalloceniumbildende Verbindung und eine oder mehrere Metallocenverbindungen z.B. der Formel IV) eingesetzt. Die benötigten Mengen an Antistatikum können jedoch, je nach Art des eingesetzten Antistatikums, in weiten Bereichen schwanken.

Die nachfolgenden Beispiele dienen zur näheren Erläuterung der Erfindung

Allgemeine Angaben: Herstellung und Handhabung der Verbindungen erfolgten unter Ausschluß von Luft und Feuchtigkeit unter Argonschutz (Schlenk-Technik). Alle benötigten Lösemittel wurden vor Gebrauch durch mehrstündiges Sieden über geeignete Trockenmittel und anschließende Destillation unter Argon absolutiert.

Beispiel 1: Synthese des Anhydrids

18.1 g (50mmol) Bis(pentafluorphenyl)borinsäure werden 8 Stunden lang im Hochvakuum bei 100°C getempert. Anschließend wird der verbleibende Rückstand in 500 ml Pentan aufgenommen und filtriert. Der Rückstand wird danach noch einmal mit 2 x 200 ml Pentan gewaschen und im Vakuum getrocknet. Man erhält 16.2 g des entsprechenden Anhydrid (92% Ausbeute).

¹⁹F-NMR (C₆D₆): -134ppm (m, 4F, o-B(C₆F₅)₂); -146ppm (m, 2F, p-B(C₆F₅)₂); -161ppm (m, 4F, m-B(C₆F₅)₂)

Beispiel 2: Trägerung des Anhydrids

14.0 g SiO_2 (MS3030, Fa. PQ, getrocknet bei 600°C im Argonstrom) werden in 20 ml Toluol vorgelegt, 2.6 ml N,N-Dimethylanilin (20.80 mmol) zugetropft und zwei
5 Stunden bei Raumtemperatur gerührt. Anschließend werden bei 0°C 14.7 g Borinsäureanhydrid (aus Beispiel 1) (20.80 mmol) gelöst in 40 ml Toluol zugegeben. Man läßt auf Raumtemperatur erwärmen und rührt die Suspension zwei Stunden bei dieser Temperatur. Die entstandene hellgrüne Suspension wird abfiltriert und der
10 Rückstand mit 50 ml Toluol und anschließend mit dreimal 100 ml n-Pentan gewaschen. Danach wird der Rückstand im Ölpumpenvakuum getrocknet. Es resultieren 16.4 g des geträgerten Kokatalysatorsystems.

Beispiel 3: Herstellung des Katalysatorsystems

15 Zu einer Lösung von 5 mg (8 μmol) Dimethylsilandiylbis(2-methyl-4-phenyl-indenyl)-zirkoniumdichlorid in 5 ml Toluol werden 0.03 ml Trimethylaluminium (20% ig in Exxol, 70 μmol) zugegeben und die Lösung 1.5 Stunden bei RT gerührt. Anschließend werden 996 mg (0.18 mmol/g) der unter Beispiel 2 hergestellten
20 Verbindung portionsweise zugegeben. Die Lösung wird 30 Minuten bei Raumtemperatur gerührt. Danach entfernt man das Lösemittel im Ölpumpenvakuum. Es resultieren 1.001 g eines hellgrünen freifließenden Pulvers.

Beispiel 4: Polymerisation

25 Zum Einschleusen in das Polymerisationssystem wird 1 g des geträgerten Katalysatorsystems in 30 ml Exxol resuspendiert. Parallel dazu wird ein trockener 16-dm³-Reaktor zunächst mit Stickstoff und anschließend mit Propylen gespült und mit 10 dm³ flüssigem Propen befüllt. Dann wurden 0.5 cm³ einer 20%igen Triisobutylaluminiumlösung in Varsol mit 30 cm³
30 Exxol verdünnt in den Reaktor gegeben und der Ansatz bei 30°C 15 Minuten gerührt. Anschließend wurde die Katalysatorsuspension in den Reaktor gegeben. Das Reaktionsgemisch wurde auf die Polymerisationstemperatur von 60°C

aufgeheizt (4°C/min) und das Polymerisationssystem 1 h durch Kühlung bei 60°C gehalten. Gestoppt wurde die Polymerisation durch Abgasen des restlichen Propylens. Das Polymer wurde im Vakuumtrockenschrank getrocknet. Es resultieren 485 g Polypropylen-Pulver. Der Reaktor zeigte keine Beläge an der Innenwand oder

5 Rührer. Die Katalysatoraktivität betrug 97 kg PP/g Metallocen x h

Patentansprüche:

1. Katalysatorsystem enthaltend

A) mindestens ein Metallocen,

B) mindestens eine Lewis Base der Formel I




worin

R^3, R^4, R^5 gleich oder verschieden sind und ein Wasserstoffatom, eine C_1 - C_{20} Alkyl-, C_1 - C_{20} Halogenalkyl-, C_6 - C_{40} Aryl-, C_6 - C_{40} Halogenaryl-, C_7 - C_{40} Alkylaryl- oder C_7 - C_{40} Arylalkyl-Gruppe ist und zwei Reste oder alle drei Reste R^3, R^4 und R^5 über C_2 - C_{20} Kohlenstoffeinheiten miteinander verbunden sein können,

M^1 ist ein Element der V. Hauptgruppe des Periodensystems der Elemente, insbesondere Stickstoff oder Phosphor

C) mindestens einen Träger

D) und mindestens eine Organobor- oder Organoaluminium-Verbindung, die aus Einheiten der Formel II



worin

R^1, R^2 gleich oder verschieden sind und ein Wasserstoffatom, ein Halogenatom, eine borfreie C_1 - C_{40} -kohlenstoffhaltige Gruppe wie C_1 - C_{20} -Alkyl, C_1 - C_{20} -Halogenalkyl, C_1 - C_{10} -Alkoxy, C_6 - C_{20} -Aryl, C_6 - C_{20} -Halogenaryl, C_6 - C_{20} -Aryloxy, C_7 - C_{40} -Arylalkyl, C_7 - C_{40} -Halogenarylalkyl, C_7 - C_{40} -Alkylaryl, C_7 - C_{40} -Halogenalkylaryl sind oder R^1 kann eine $OSiR^a_3$ -Gruppe sein, worin R^a gleich oder verschieden sind und ein Wasserstoffatom, ein Halogenatom, eine C_1 - C_{40} -kohlenstoffhaltige Gruppe wie C_1 - C_{20} -Alkyl, C_1 - C_{20} -Halogenalkyl, C_1 - C_{10} -Alkoxy, C_6 - C_{20} -Aryl, C_6 - C_{20} -Halogenaryl, C_6 - C_{20} -Aryloxy, C_7 - C_{40} -Arylalkyl, C_7 - C_{40} -Halogenarylalkyl, C_7 - C_{40} -Alkylaryl, C_7 - C_{40} -Halogenalkylaryl sind oder R^1 kann eine $CH(SiR^b_3)_2$ -Gruppe sein, worin R^b gleich oder verschieden sind und ein Wasserstoffatom, ein Halogenatom, eine C_1 - C_{40} -kohlenstoffhaltige Gruppe wie C_1 - C_{20} -Alkyl, C_1 - C_{20} -Halogenalkyl,

C₁-C₁₀-Alkoxy, C₆-C₂₀-Aryl, C₆-C₂₀-Halogenaryl, C₆-C₂₀-Aryloxy, C₇-C₄₀-Arylalkyl, C₇-C₄₀-Halogenarylalkyl, C₇-C₄₀-Alkylaryl, C₇-C₄₀-Halogenalkylaryl sein,

X gleich oder verschieden ein Element der Gruppe VIa des Periodensystems der Elemente oder eine NH-Gruppe ist,

M² ein Element der IIIa des Periodensystems der Elemente ist, und

k eine natürliche Zahl von 1 bis 100 ist.

aufgebaut ist und die kovalent an den Träger gebunden ist.

2. Katalysatorsystem gemäß Anspruch 1, dadurch gekennzeichnet, daß es zusätzlich noch eine Organometalverbindung der Formel (IV)



worin

M⁴ ein Element der I., II. und III. Hauptgruppe des Periodensystems der Elemente ist, vorzugsweise Lithium, Magnesium und Aluminium, insbesondere Aluminium, ist

R⁹ gleich oder verschieden ein Wasserstoffatom, ein Halogenatom, eine C₁-C₄₀-kohlenstoffhaltige Gruppe wie eine C₁-C₂₀-Alkyl-, C₆-C₄₀-Aryl-, C₇-C₄₀-Arylalkyl oder C₇-C₄₀-Alkyl-aryl-Gruppe, bedeutet,

p eine ganze Zahl von 1 bis 3 und

q eine ganze Zahl von 1 bis 4 ist, enthält.

3. Verfahren zur Herstellung eines Polyolefins durch Polymerisation eines oder mehrerer Olefine in Gegenwart eines Katalysatorsystems nach einem der Ansprüche 1 oder 2.

4. Verwendung eines Katalysatorsystems gemäß einem der Ansprüche 1 oder 2 zur Herstellung eines Polyolefins.

INTERNATIONAL SEARCH REPORT

International Application No

PCT/EP 99/07087

A. CLASSIFICATION OF SUBJECT MATTER

IPC 7 C08F4/60 C08F10/00

According to International Patent Classification (IPC) or to both national classification and IPC

B. FIELDS SEARCHED

Minimum documentation searched (classification system followed by classification symbols)

IPC 7 C08F

Documentation searched other than minimum documentation to the extent that such documents are included in the fields searched

Electronic data base consulted during the international search (name of data base and, where practical, search terms used)

C. DOCUMENTS CONSIDERED TO BE RELEVANT

Category *	Citation of document, with indication, where appropriate, of the relevant passages	Relevant to claim No.
P, Y	DE 197 33 017 A (HOECHST AG) 4 February 1999 (1999-02-04) page 8, line 1 - line 10 page 6, line 11 - line 21 page 5, line 28 - line 42 page 4, line 5 - line 30 page 11, line 50 - line 54 ---	1-4
P, Y	DE 197 57 540 A (HOECHST AG) 24 June 1999 (1999-06-24) column 3, line 23 - line 46 examples 1-3 ---	1-4
A	EP 0 495 099 A (MITSUI PETROCHEMICAL IND) 22 July 1992 (1992-07-22) example 16 -----	1

☐ Further documents are listed in the continuation of box C.

☒ Patent family members are listed in annex.

* Special categories of cited documents:

- *A* document defining the general state of the art which is not considered to be of particular relevance
- *E* earlier document but published on or after the international filing date
- *L* document which may throw doubts on priority claim(s) or which is cited to establish the publication date of another citation or other special reason (as specified)
- *O* document referring to an oral disclosure, use, exhibition or other means
- *P* document published prior to the international filing date but later than the priority date claimed

- *T* later document published after the international filing date or priority date and not in conflict with the application but cited to understand the principle or theory underlying the invention
- *X* document of particular relevance; the claimed invention cannot be considered novel or cannot be considered to involve an inventive step when the document is taken alone
- *Y* document of particular relevance; the claimed invention cannot be considered to involve an inventive step when the document is combined with one or more other such documents, such combination being obvious to a person skilled in the art
- *&* document member of the same patent family

Date of the actual completion of the international search

25 January 2000

Date of mailing of the international search report

10/02/2000

Name and mailing address of the ISA

European Patent Office, P.B. 5818 Patentlaan 2
NL - 2280 HV Rijswijk
Tel. (+31-70) 340-2040, Tx. 31 651 epo nl,
Fax: (+31-70) 340-3016

Authorized officer

Fischer, B

INTERNATIONAL SEARCH REPORT

Information on patent family members

Int. l. Application No

PCT/EP 99/07087

Patent document cited in search report	Publication date	Patent family member(s)	Publication date
DE 19733017 A	04-02-1999	WO 9906414 A	11-02-1999
DE 19757540 A	24-06-1999	WO 9933881 A	08-07-1999
EP 0495099 A	22-07-1992	JP 2173014 A	04-07-1990
		JP 2685261 B	03-12-1997
		JP 2173016 A	04-07-1990
		JP 2685262 B	03-12-1997
		JP 2173015 A	04-07-1990
		JP 2685263 B	03-12-1997
		DE 68928696 D	09-07-1998
		DE 68928696 T	03-12-1998
		KR 9309208 B	24-09-1993
		US 5916988 A	29-06-1999
		AT 166890 T	15-06-1998
		CA 2008315 A,C	24-07-1990
		DE 68929006 D	01-07-1999
		DE 68929006 T	07-10-1999
		EP 0685498 A	06-12-1995
		EP 0685496 A	06-12-1995
		EP 0769505 A	23-04-1997
		EP 0955321 A	10-11-1999
		EP 0955322 A	10-11-1999
		ES 2118718 T	01-10-1998
		WO 9007526 A	12-07-1990
		JP 2276807 A	13-11-1990
		JP 2571280 B	16-01-1997
		US 5525689 A	11-06-1996
		US 5714426 A	03-02-1998
		US 5639842 A	17-06-1997
		US 5218071 A	08-06-1993
		US 5336746 A	09-08-1994

INTERNATIONALER RECHERCHENBERICHT

Internationales Aktenzeichen

PCT/EP 99/07087

A. KLASIFIZIERUNG DES ANMELDUNGSGEGENSTANDES
IPK 7 C08F4/60 C08F10/00

Nach der Internationalen Patentklassifikation (IPK) oder nach der nationalen Klassifikation und der IPK

B. RECHERCHIERTE GEBIETE

Recherchierter Mindestprüfstoff (Klassifikationssystem und Klassifikationssymbole)
IPK 7 C08F

Recherchierte aber nicht zum Mindestprüfstoff gehörende Veröffentlichungen, soweit diese unter die recherchierten Gebiete fallen

Während der internationalen Recherche konsultierte elektronische Datenbank (Name der Datenbank und evtl. verwendete Suchbegriffe)

C. ALS WESENTLICH ANGESEHENE UNTERLAGEN

Kategorie*	Bezeichnung der Veröffentlichung, soweit erforderlich unter Angabe der in Betracht kommenden Teile	Betr. Anspruch Nr.
P, Y	DE 197 33 017 A (HOECHST AG) 4. Februar 1999 (1999-02-04) Seite 8, Zeile 1 - Zeile 10 Seite 6, Zeile 11 - Zeile 21 Seite 5, Zeile 28 - Zeile 42 Seite 4, Zeile 5 - Zeile 30 Seite 11, Zeile 50 - Zeile 54 -----	1-4
P, Y	DE 197 57 540 A (HOECHST AG) 24. Juni 1999 (1999-06-24) Spalte 3, Zeile 23 - Zeile 46 Beispiele 1-3 -----	1-4
A	EP 0 495 099 A (MITSUI PETROCHEMICAL IND) 22. Juli 1992 (1992-07-22) Beispiel 16 -----	1

☐ Weitere Veröffentlichungen sind der Fortsetzung von Feld C zu entnehmen

☒ Siehe Anhang Patentfamilie

* Besondere Kategorien von angegebenen Veröffentlichungen :

"A" Veröffentlichung, die den allgemeinen Stand der Technik definiert, aber nicht als besonders bedeutsam anzusehen ist

"E" älteres Dokument, das jedoch erst am oder nach dem internationalen Anmeldedatum veröffentlicht worden ist

"L" Veröffentlichung, die geeignet ist, einen Prioritätsanspruch zweifelhaft erscheinen zu lassen, oder durch die das Veröffentlichungsdatum einer anderen im Recherchenbericht genannten Veröffentlichung belegt werden soll oder die aus einem anderen besonderen Grund angegeben ist (wie ausgeführt)

"O" Veröffentlichung, die sich auf eine mündliche Offenbarung, eine Benutzung, eine Ausstellung oder andere Maßnahmen bezieht

"P" Veröffentlichung, die vor dem internationalen Anmeldedatum, aber nach dem beanspruchten Prioritätsdatum veröffentlicht worden ist

"T" Spätere Veröffentlichung, die nach dem internationalen Anmeldedatum oder dem Prioritätsdatum veröffentlicht worden ist und mit der Anmeldung nicht kollidiert, sondern nur zum Verständnis des der Erfindung zugrundeliegenden Prinzips oder der ihr zugrundeliegenden Theorie angegeben ist

"X" Veröffentlichung von besonderer Bedeutung; die beanspruchte Erfindung kann allein aufgrund dieser Veröffentlichung nicht als neu oder auf erfindeterischer Tätigkeit beruhend betrachtet werden

"Y" Veröffentlichung von besonderer Bedeutung; die beanspruchte Erfindung kann nicht als auf erfindeterischer Tätigkeit beruhend betrachtet werden, wenn die Veröffentlichung mit einer oder mehreren anderen Veröffentlichungen dieser Kategorie in Verbindung gebracht wird und diese Verbindung für einen Fachmann naheliegend ist

"Z" Veröffentlichung, die Mitglied derselben Patentfamilie ist

Datum des Abschlusses der internationalen Recherche

25. Januar 2000

Abmeldedatum des internationalen Recherchenberichts

10/02/2000

Name und Postanschrift der internationalen Recherchenbehörde

Europäisches Patentamt, P.B. 5818 Patentlaan 2
NL - 2280 HV Rijswijk
Tel. (+31-70) 340-2040, Tx. 31 651 epo nl,
Fax: (+31-70) 340-3016

Bevollmächtigter Beauftragter

Fischer, B.

INTERNATIONALER RECHERCHENBERICHT

Angaben zu Veröffentlichungen, die zur selben Patentfamilie gehören

Internationales Aktenzeichen
PCT/EP 99/07087

Im Recherchenbericht angeführtes Patentdokument	Datum der Veröffentlichung	Mitglied(er) der Patentfamilie	Datum der Veröffentlichung
DE 19733017 A	04-02-1999	WO 9906414 A	11-02-1999
DE 19757540 A	24-06-1999	WO 9933881 A	08-07-1999
EP 0495099 A	22-07-1992	JP 2173014 A	04-07-1990
		JP 2685261 B	03-12-1997
		JP 2173016 A	04-07-1990
		JP 2685262 B	03-12-1997
		JP 2173015 A	04-07-1990
		JP 2685263 B	03-12-1997
		DE 68928696 D	09-07-1998
		DE 68928696 T	03-12-1998
		KR 9309208 B	24-09-1993
		US 5916988 A	29-06-1999
		AT 166890 T	15-06-1998
		CA 2008315 A,C	24-07-1990
		DE 68929006 D	01-07-1999
		DE 68929006 T	07-10-1999
		EP 0685498 A	06-12-1995
		EP 0685496 A	06-12-1995
		EP 0769505 A	23-04-1997
		EP 0955321 A	10-11-1999
		EP 0955322 A	10-11-1999
		ES 2118718 T	01-10-1998
		WO 9007526 A	12-07-1990
		JP 2276807 A	13-11-1990
		JP 2571280 B	16-01-1997
		US 5525689 A	11-06-1996
		US 5714426 A	03-02-1998
		US 5639842 A	17-06-1997
		US 5218071 A	08-06-1993
		US 5336746 A	09-08-1994